GOLDAIR

Operating Instructions

40cm Pedestal Fan

Item: GCPF400

General Care and Safety Guide

Thank you for choosing this Goldair product. This Goldair appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully and keep them for future reference.

1. Use only the voltage specified on the rating plate of the appliance.
2. Keep all objects at least 1 Metre from the front, sides and rear of the appliance
3. This appliance is intended for household use only and not for commercial or industrial use.
4. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
5. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
6. Always unplug appliance when not in use.
7. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the CDB Customer Services Team.
8. If your appliance does not work, or is not working properly, contact the place of purchase. Repair work on the appliance by unqualified persons can cause serious risk to the user.
9. Ensure hands are dry before handling the plug or the main unit.
10. Carry out regular checks of the supply cord to ensure no damage is evident.
11. Children should be supervised to ensure that they do not play with the appliance.
12. Ensure that the cord is fully extended (not coiled) while in use.
13. Avoid contact with the moving parts. Keep hands, hair, clothing, away from blade of the fan during operation to reduce the risk of injury to person and/or damage to the unit.
14. Switch off and use handles provided when moving.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the fan by a person responsible for their safety.
16. It is recommended that this fan is plugged directly into the wall socket.
17. A correctly specified, undamaged extension cord may be used with this fan provided it is used in a safe manner.
18. Never place appliance close to radiant heat source.
19. Never operate in areas where petrol, paint or other flammable liquids are used or stored.
20. Never use the appliance to dry clothes.
21. Never insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
22. Never use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
23. Never connect the appliance to mains supply until completely assembled and adjusted.
24. Never remove plug from power socket until the appliance has been switched off.
25. Never remove plug from power socket by pulling cord – always grip plug.
26. Never twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
27. Never use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
28. Due to the risk of injury, never use this appliance for any purpose other than its intended use. This appliance is intended for use in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses, by clients in hotels, motels, bed and breakfast type environments and other residential type environments
29. Never use this appliance outdoors.
30. Never operate the appliance with a damaged cord or plug, after it malfunctions, or if it has been damaged in any manner. Have the appliance checked and repaired by a qualified electrician if repair is necessary. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
31. Never place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.

TECHNICAL SPECIFICATION

Model:	GCPF400
Supply:	220 - 240VAC 50Hz
Wattage:	55W

Components

1) Motor Housing
2) Cross Bars
3) Support Shaft
4) Screws
5) Base Cover
6) Fastening Screw
7) Retaining Ring
8) Retaining Knob
9) Grill
10) Grill Ring
11) Blade
12) Remote Control

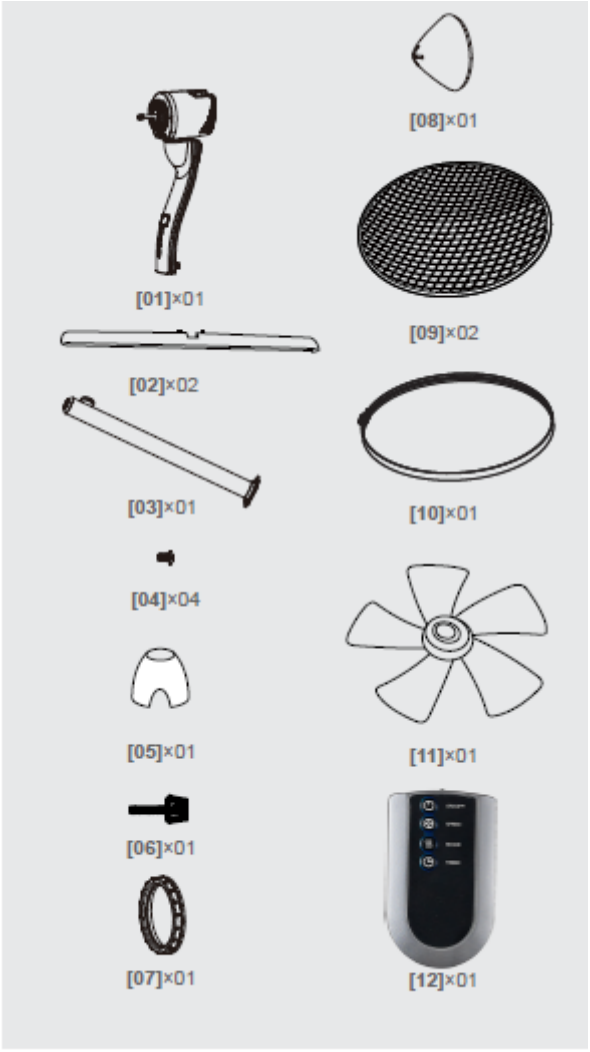

Assembly

Loosen and remove the four screws from the cross bars then interlock. Be sure to align the four holes in the bars with those on the flange of the support shaft. Secure the flange to the bars with the four screws.

Loosen and remove the height adjustment knob from the top of the support shaft. Slide the base decorative cap down over the assembly. Replace the height adjustment knob on top of the support shaft. Pull the inner tube out from the outer tube to adjust the tube to the desired height and tighten the knob.

If necessary, slightly loosen the set screw by turning it anticlockwise. Slide the motor housing down over the support shaft and tighten the fastening screw. Make sure the screw is tightly secured.

Unscrew the retaining ring from the front of the motor housing by rotating it anticlockwise. Position the rear grill against the front of the motor housing with the handle at the top, ensure that the locating pegs on the motor housing are engaged correctly in the holes of the rear grill.

Tighten the retaining ring clockwise; do not to over tighten.

Push the fan blade onto the motor shaft, locating the slot at the back of the blade on the drive pin that passes through the motor shaft. Tighten the retaining knob by turning it anticlockwise.

Slide the grill ring over the rear grill and position the front grill against the rear grill. Insert the bolt through the hole on the grill ring and screw on the nut.

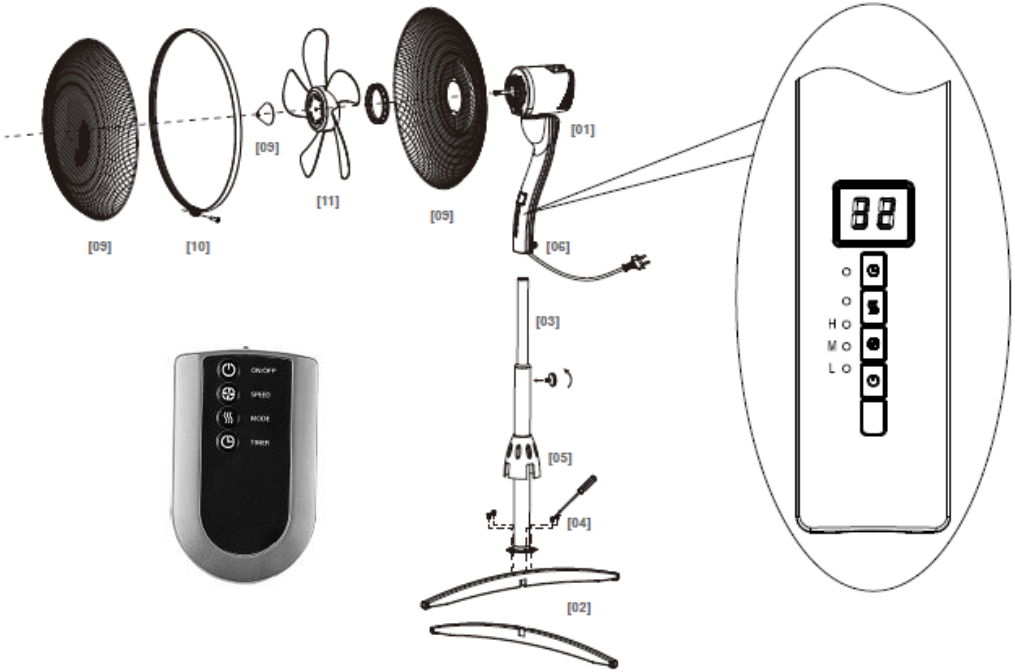

Operating your Fan

Always choose a safe location for the fan, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. This appliance requires no installation, it should be used solely as a portable appliance.

WARNING Keep all objects at least 1 metre from the front, sides and rear of the appliance

Fan control

Place the fan on a dry, level and sturdy surface.

Plug the power cord into the socket.

Switch on the appliance by pressing the on/off button on the control panel or remote control. The will start to blow at low speed.

To change speed, press the fan speed button. Fan speed will change with each button stroke.

The fan has an automatic timer to turn the unit OFF at intervals of 1 to 7 hours. To set the timer, turn the unit on at the required speed, press the TIMER button until the desired run time is illuminated.
The fan will turn off once the time has expired.

Adjust tilt by turning neck screw and tilting body to the desired wind direction (i.e. either upward or downward).

To activate the oscillation function, push down the oscillation pin on the top of the motor. The fan will then oscillate until the pin is pulled back up.

Pressing the mode button will select the wind mode, i.e. natural, sleep or normal. The mode will be indicated on the display panel.

IMPORTANT! NEVER COVER THIS APPLIANCE!

Remote Control

The remote control requires 2 x AAA batteries (not included). Open the battery compartment by sliding the cover down. Insert batteries, noting the polarity indicated in the battery compartment. Replace the cover by sliding it up.

Cleaning and Maintenance

To avoid risk of electric shock, before cleaning, you MUST ALWAYS switch off and unplug the fan.

Use only a soft, damp cloth to gently wipe the fan and dry well.

We recommend periodic cleaning of this appliance by lightly running a vacuum cleaner nozzle over the grills to remove any dust or dirt that may have accumulated.

Do not immerse the fan in water and never allow water to enter the motor housing.
Do not use harsh chemicals to clean the fan.

PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase. (Refer to back of booklet).

GOLDAIR

SUPPORT AND TECHNICAL ADVICE

Goldair – New Zealand
Monday – Friday 8am-5pm
Phone +64 (0)9 917 4000
Phone 0800 232 633
info@cdb.co.nz

Goldair – Australia
Monday – Friday 8am-5pm
Phone +61 (0)3 9365 5100
Phone 1300 465 324
info@cdbgoldair.com.au

One Year Warranty

Thank you for purchasing this Goldair product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **one year.** In non-domestic use Goldair limits the voluntary warranty to **three months.**

Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits to you given by this warranty are in addition to other rights and remedies available to you under a law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Goldair – New Zealand
CDB Goldair
PO Box 100-707
N.S.M.C
Auckland, 0745

Phone +64 (0)9 917 4000
Phone 0800 232 633
www.goldair.co.nz

Goldair – Australia
CDB Goldair Australia Pty
PO Box 574
South Morang
Victoria, 3752

Phone +61 (0)3 9365 5100
Phone 1300 GOLDAIR (1300 465 324)
www.goldair.com.au

Goldair One Year Warranty (IMPORTANT: Please complete and retain this warranty card)

Name _____

_____

Address _____

_____

_____

Place Of Purchase _____ Date of Purchase _____

Name Of Product _____ Model Number _____

Attach a copy of the purchase receipt to this warranty card

Due to continual design improvements, the product illustrated in this User Manual may differ slightly from the actual product.